


IRRIGATION MANUAL



RUNNING THE PUMP

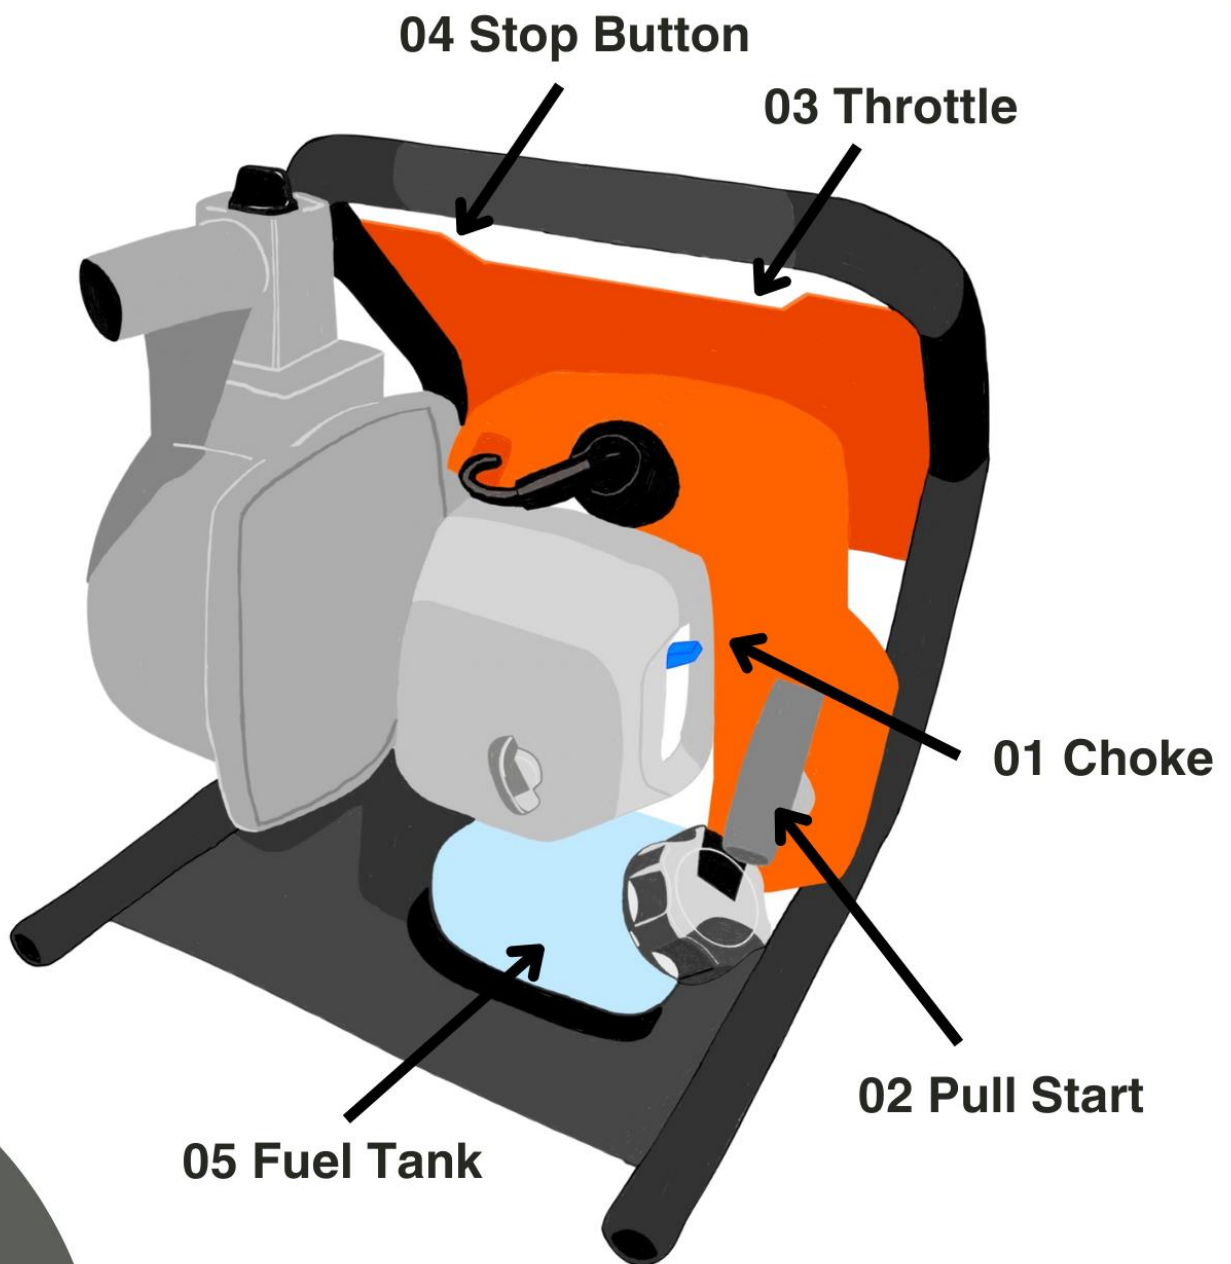

STEPS

- Turn on the tap at the tank.
- Move the choke (01) to the start position, upwards.
- Pull the start handle (02) till the engine catches and runs.
- Move the choke (01) to the run position, downwards.
- Move the throttle (03) to the marked position on the pump.
- Run the pump for a maximum of three minutes.
- Turn off by pressing the stop button (04)

REFUELING THE PUMP

STEPS

- Mix petrol and oil using a ratio of 50:1, respectively.
 - Fill the gas tank (05) up to the fill line.
- 