


# HOW TO USE THE PUMP HEAD

1. Know the pump head lever's "unlocked" and "locked" positions

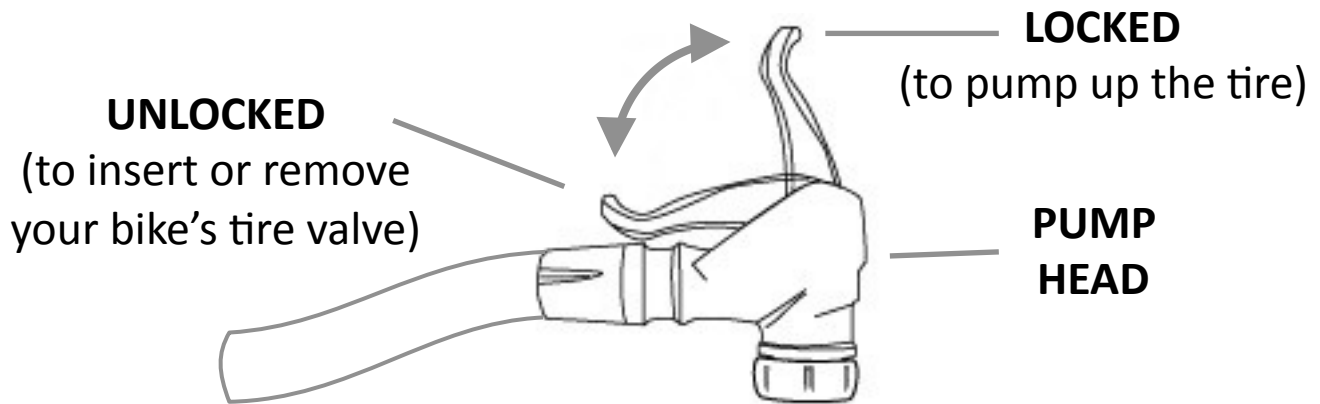

2. Know your bike tire's valve type



## SCHRADER

Like a car tire;  
no preparation  
needed



## PRESTA

Before inserting into pump head,  
unscrew the built-in brass cap and  
tap it to un-stick its internal spring

(twist to open/close)

3. Unlock the pump head (flip lever toward hose)
4. Push the pump head straight onto the valve, inserting the valve as far as possible, especially the Presta type. (It may help to first rotate the wheel so the valve is at the bottom, pointing up.)
5. While holding the pump head firmly in place on the tire valve, lock it (flip lever away from hose)
6. Inflate tire (suggested pressure range is printed on tire sidewall)
7. Unlock the lever and gently remove the pump head
8. If Presta valve, twist the built-in brass cap all the way in until tight
9. Replace the valve's plastic outer cap, if it had one